MARK	REVISION	DATE	SIGN
\triangle			

USER'S MANUAL CONVERTER-CV2

Before usage

Thank you very much for purchase this tele-room controller. You had better fully read this user's manual. It can give you more convenient and warm life.

Contents

- ▶ Check point for safety.
- ▶ Check point for fixing.
- Check point for usage.
 Fixing & Wiring.
 Description & Function.

Check point for safety

- Check the electric voltage before you operate the boiler.
 Tele-room controller can be adapted to voltage DC 24~31V form the main controller of boiler. Do not adapt to another electric outlet AC 220V or other.
- 3. Make sure to connect the electric port properly. One is for room controller, the other is for telephone.

Check point for fixing

- 1. Fix the room controller on the wall of main room or living room. The height is about 1.5m.
- Fix on the properly spot to sense the room temperature.
- 3. Avoid to fix near the heater or under the sun light, this can cause the torsion of the case and do a harm to the electric parts inside the case.

 4. Avoid to fix in the place there is dirty, fumy, humid, this can do a harm to the electric parts inside the case.

Check point for usage


- You had better take care to prevent the metallic parts (Needle, Coin) or in flammables (Paper, Match stick) form entering into the air vent hole of the case. This can make a short-circuit or fire.
- 2. Do not open the case, and treat your self.
- Be careful the power line not to exposed in the room.
 Keep out form the volatiles (Thinner, Benzine, Solvent, ...)
- 5. Before you polish the room controller, plug the power cord out and use a smooth cloth.

Fixing & Wiring



- 1. Connect firmly the room controller wire (2 Line) form the boiler, to the room controller port in the back of the room controller.

 2. Connect firmly the telephone wire to the telephone port in the back side of the room controller.
- 3. Fix the room controller firmly on the wall, using the room controller bracket or socket

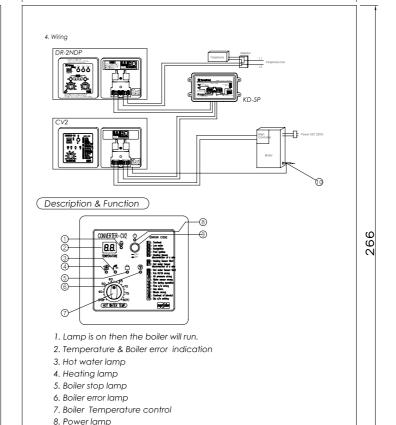

9. Power & Reset switch (when the balloon goes up error)

186

앞 면

뒷 면

10. Hot water Current Sensor

1	사용설명서(CV-2)					1		13-MUCV2-E		
NO.	DESCRIPTION			MAT'L	-	Q'TY		CODE NO.	REMARKS	
ITEM	ROOMCON			SCALE		T		TITLE US HUU		
DRAWN	DESIGNED	CHECKED	APPROVED	' /		′		사용 설명서		
S.	, , , , ,	S.M.KIM	J.W.CHOI	DATE		CODE NO.				
	C.LEE			2008.0	<i>)4</i> .	22	DF	RAWING NO. $LN-C$	CV2	

UNIK PRODUCTS CO., LTD.